


 
HVM100 Configuration Guide

Hand Arm Vibration


ADP084A
Adapter kit




ADP080A
Hand Adapter



ADP081A
Handle Adapter



ADP082A
Clamp Adapter




ADP063
Palm Adapter

SEN040F-CBL
SEN041F-CBL
Triax and cable


SEN040F
1 mV/g triaxial Accelerometer

SEN041F
10 mV/g triaxial Accelerometer




5-40 Female mount thread

CBL158
4-pin, 1/4-28 to 4-pin LEMO™




SEN026-CBL
Triax and cable


SEN026
10 mV/g triaxial Accelerometer




CBL125
4-pin mini to 4-pin LEMO™




Accessories




HVM100-ACC
CBL 106
CBL 124
PSA027
In CCS020




CCS028
Belt Pouch




394C06
Hand held Shaker
1 g @ 159.2 Hz



CBL124
3 x BNC to 5-pin Switchcraft
Used for AC output




CBL120
3 x 10-32 to 4-pin LEMO™



CBL121
3 x BNC to 4-pin LEMO™

Whole Body Vibration

SEN027-CBL
CBL 158
Triaxial Seat Pad Sensor

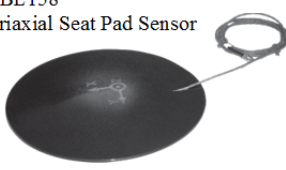


General Vibration

SEN020-CBL
SEN021F-CBL
Triax and cable


SEN020
1 mV/g triaxial Accelerometer

SEN021F
10 mV/g triaxial Accelerometer



5-40 stud mount

CBL158
4-pin, 1/4-28 to 4-pin LEMO™



HVM100-L1 Human Vibration Meter